

## OPERATING THE DISHWASHER

**THE DISHWASHER REQUIRES AT LEAST 45 MINUTES TO HEAT TO PROPER TEMPERATURE  
PLEASE BE PATIENT**

- 1) Ensure that the pump suction filter in the dishwasher tank is in place and properly fitted & secured (**bottom, front and left inside of tank**).
- 2) Place the long stopper in the drain inside the dishwasher tank (**right side**).
- 3) Place the rectangular filters in the openings above the dishwasher tank.
- 4) Run the hot water in the sink until the water is hot.
- 5) Lower the dishwasher door.
- 6) Turn the main switch to the vertical position (**medium wash cycle**), fill the dishwasher tank and allow the water to heat to 140°F.
- 7) Open the door and slide a rack, from the left, into the washing chamber.
- 8) Close door and the wash cycle will automatically begin.
- 9) Cycle stops (**yellow washing indicator light will go off – DO NOT immediately open the door – wait 15 seconds until the spray arms stop turning**).
- 10) Allow the water in the tank to reheat to **140°F**.
- 11) Open the door and slide dish rack to drain table on the right.
- 12) Slide on another rack, and close the door to automatically start another wash cycle.

**Note: Dry the bottom of all glasses after removing from dishwasher**

### **Closing Down the Dishwasher**

- 1) Turn the main switch back to OFF position
- 2) Lift out the rectangular filters and clean as necessary
- 3) Lift out the long stopper and let the water drain from the tank.
- 4) Remove, clean and replace the pump suction filter
- 5) Leave the dishwasher door open